


CONNECT A TURNTABLE

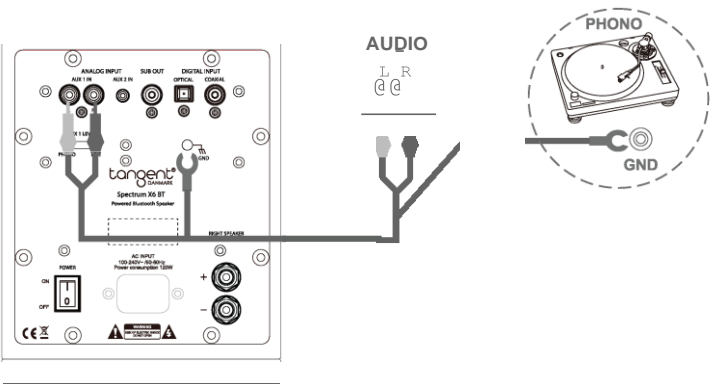

PHONO

[For use with a turntable without built-in phono pre-amp]:

Slide the Phono/ Line switch to phono position.

Connect the RCA L/R from your turntable to the RCA L/R inputs on the rear panel of the Tangent Spectrum X5 or X6 BT.

Connect the ground wire from the turntable to the GND on the rear panel of the Tangent Spectrum X5 or X6 BT.

Press AUX 1 on the Tangent Spectrum X5 or X6 BT remote.

SPECIFICATIONS		X5BT	X6BT
Speaker Type:	Powered Speaker		Powered Speaker
Tweeter/Midrange/Woofer:	1"/ 1x5"		1" / 2x5"
Amplifier power:	2x50W		2x60W
Sensitivity:	88dB		90dB
Frequency response:	60Hz-20kHz		50Hz-20kHz
Amplifier type/AC Power:	Class-D / AC100-240V/50-60Hz		
Input Connections:	Bluetooth/jack 3.5/Line RCA/Optical/Coaxial/Phono		
Cabinet finish:	Black matt or White matt painting		
Cabinet[WxDxH]mm:	166 x 205 x 340mm		66 x 268 x 923mm
Net weight [Kg]	4 kg/ unit		13,5 kg/ unit